


# ETERNA WIRING DIAGRAM FOR PRESENCE 'TN' SIDE SCREEN SAFETY

INITIAL BASIC SET UP PLEASE REFER  
TO MANUAL FOR MORE INFORMATION

## PRESENCE TN SENSOR ONLY

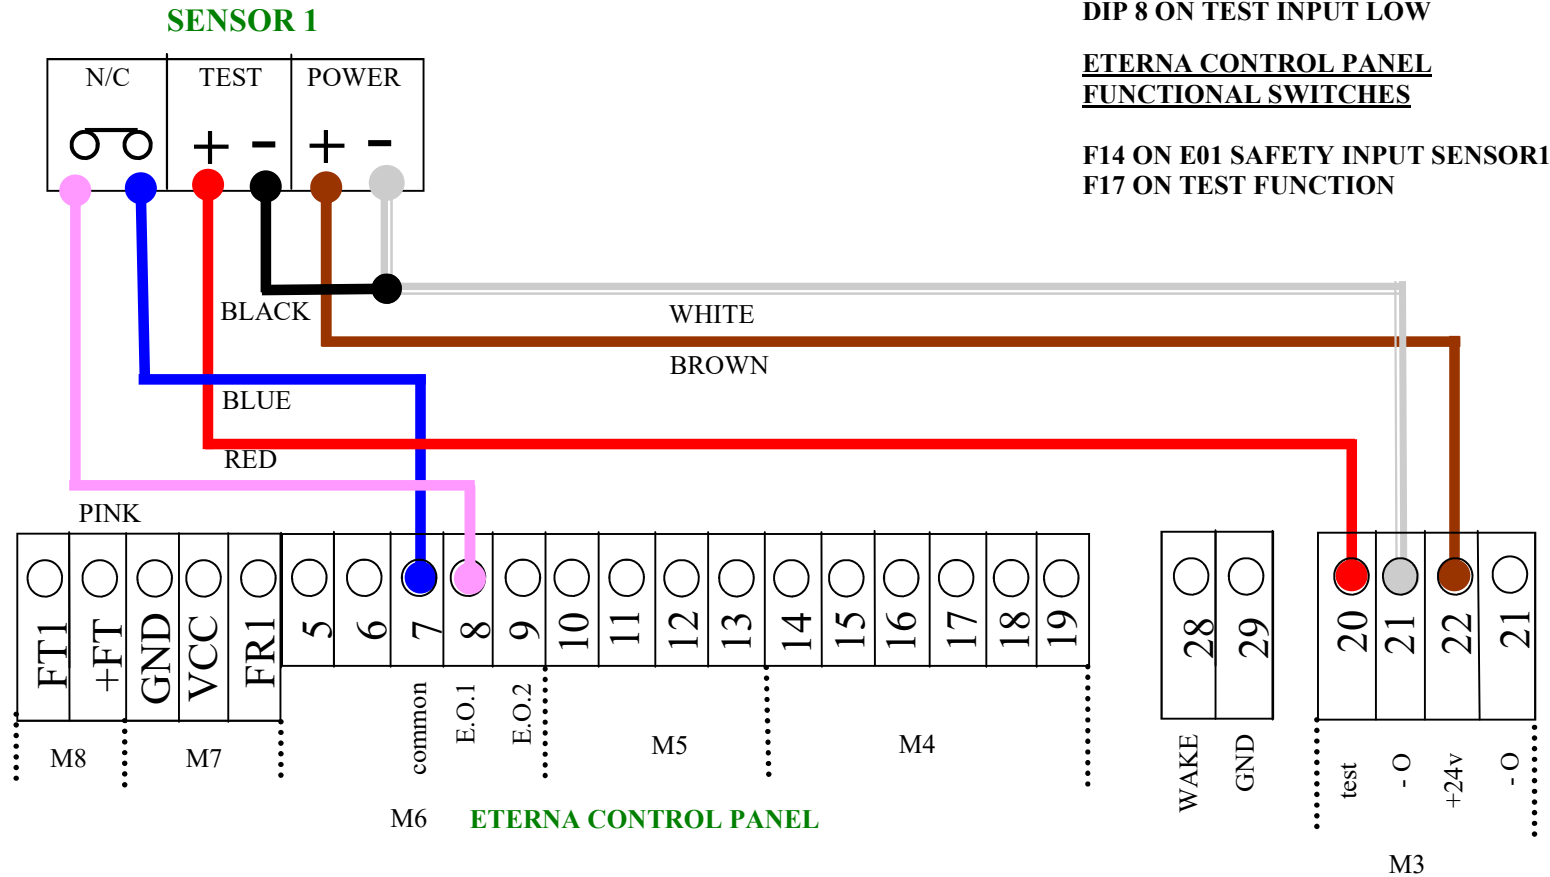

SENSOR DIP SWITCHES

DIP 8 ON TEST INPUT LOW

ETERNA CONTROL PANEL  
FUNCTIONAL SWITCHES

F14 ON E01 SAFETY INPUT SENSOR1  
F17 ON TEST FUNCTION

FOR ALL OTHER SENSOR FUNCTIONAL SETTINGS  
PLEASE REFER TO THE INSTRUCTIONS SUPPLIED WITH THE OA-PRESENCE TN SENSOR  
FOR ALL OTHER ETERNA FUNCTION SWITCH SETTINGS PLEASE REFER TO THE INSTALLATION MANUAL